


Q: How do I update the date and time on my YSI 4010 MultiLab IDS meter?

A: Follow the step by step instructions below.

1. Press and hold the **[ENTER]** button. The **Storage & config** screen should be displayed on the meter.

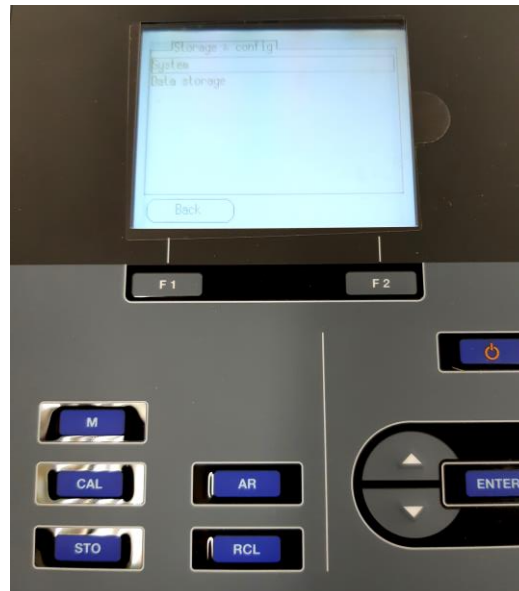

2. Press **[ENTER]** again to select **System**.
3. Use the **[v]** arrow to scroll down to the **Clock** function. Press **[ENTER]** to go to the clock window.



4. Use the [v] arrow to highlight the **Date:** row and press [ENTER] to edit the date.
5. Use the [v] and [^] arrows to adjust the **mm\dd\yy**. Press [ENTER] after each parameter is correct, and to move onto the next parameter.
6. Press [ENTER] until the entire row is highlighted again to move onto the next row. Use the [v] and [ENTER] to select the **Time:** setting.



7. Do the same as 5. to adjust to the correct time. Press [ENTER] until the entire row is highlighted.
8. Select [F1] (**Back**) until it's returned to the main screen.